


# Assembly and Installation Instructions

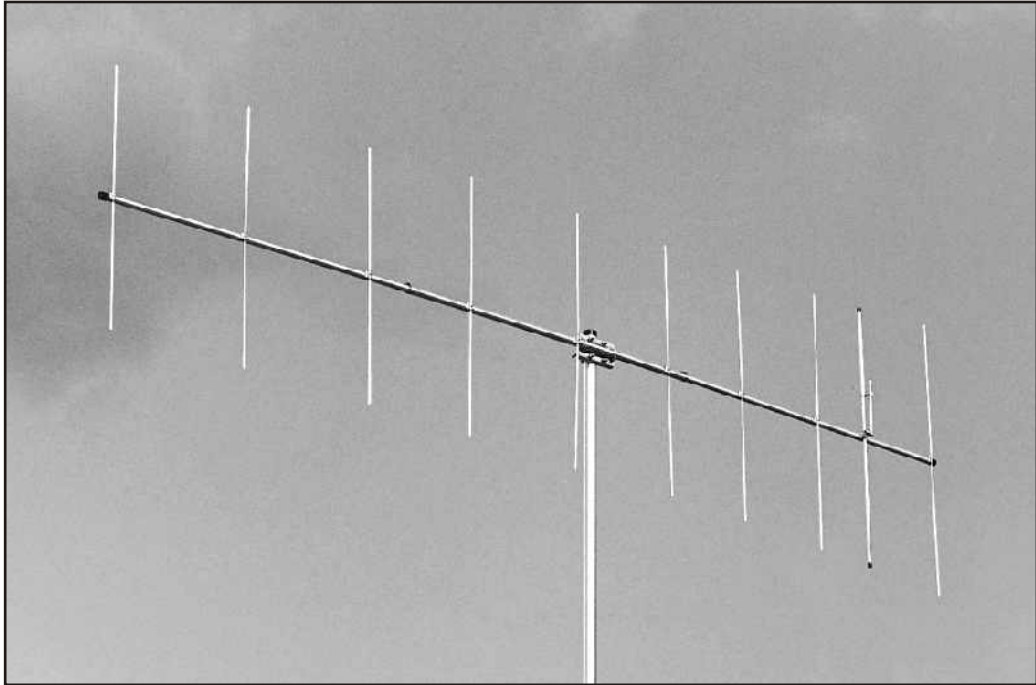

# A148-10S

## 2 METER YAGI ANTENNA

144-148 MHz

**LIMITED WARRANTY**  
Cushcraft Corporation, 48 Perimeter Road, Manchester, New Hampshire 03103, warrants to the original purchaser for one year from date of purchase that each Cushcraft antenna is free of defects in material or workmanship. If, in the judgement of Cushcraft, any such antenna is defective, then Cushcraft Corporation will, at its option, repair or replace the antenna at its expense within thirty days of the date the antenna is returned (at purchasers expense) to Cushcraft or one of its authorized representatives. This warranty is in lieu of all other expressed warranties, any implied warranty is limited in duration to one year. Cushcraft Corporation shall not be liable for any incidental or consequential damages which may result from a defect. Some states do not allow limitations on how long an implied warranty lasts or exclusions or limitations of incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty does not extend to any products which have been subject the misuse, neglect, accident or improper installation. Any repairs or alterations outside of the Cushcraft factory will nullify this warranty.



48 Perimeter Road  
Manchester, NH 03103  
603-627-7877  
FAX 603-627-1764

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE



**WARNING**

THIS ANTENNA IS AN ELECTRICAL CONDUCTOR. CONTACT WITH POWER LINES CAN RESULT IN DEATH, OR SERIOUS INJURY. DO NOT INSTALL THIS ANTENNA WHERE THERE IS ANY POSSIBILITY OF CONTACT WITH OR HIGH VOLTAGE ARC-OVER FROM POWER CABLES OR SERVICE DROPS TO BUILDINGS. THE ANTENNA, SUPPORTING MAST AND/OR TOWER MUST NOT BE CLOSE TO ANY POWER LINES DURING INSTALLATION, REMOVAL OR IN THE EVENT PART OF THE SYSTEM SHOULD ACCIDENTALLY FALL. FOLLOW THE GUIDELINES FOR ANTENNA INSTALLATIONS RECOMMENDED BY THE U.S. CONSUMER PRODUCT SAFETY COMMISSION AND LISTED IN THE ENCLOSED PAMPHLET.

Your Cushcraft VHF antenna is designed and manufactured to give top performance and trouble free service. The antenna will perform as specified if the instructions and suggestions are followed and care is used in assembly and installation. When checking the components received in your antenna package use the parts lists in each section. It is easiest to identify the various dimensions of tubing by separating them into groups of the same diameter and length. If you are unable to locate any tube or component, check the inside of all tubing. **IMPORTANT: save the weight label from the outside of the carton. Each antenna is weighed at the factory to verify the parts count. If you claim a missing part, you will be asked for the weight verification label.** There is a master parts list on page 2.

**LOCATION**

Location of the antenna is very important. Surrounding objects such as trees, power lines, other antennas, etc. will seriously reduce efficiency. To minimize the effects of surrounding objects, mount the antenna as high and in the clear as possible. If metal guy wires are used, they should be broken with strain insulators. **YOU MUST INSURE THAT NEITHER PEOPLE NOR PETS CAN COME IN CONTACT WITH YOUR ANTENNA WHILE IT IS IN OPERATION. DEADLY VOLTAGES AND CURRENTS MAY EXIST. ALSO, SINCE THE EFFECTS OF EXPOSURE TO RF ARE NOT FULLY UNDERSTOOD, LONG TERM EXPOSURE TO INTENSE RF FIELDS IS NOT RECOMMENDED. THERE IS A WARNING STICKER WHICH MUST BE ATTACHED TO THE BOOM AS SHOWN IN FIGURE E.**

Plan your installation carefully. If you use volunteer helpers be sure that they are qualified to assist you. Make certain that everyone involved understands that you are in charge and that they must follow your instructions. If you have any doubts at all employ a professional antenna installation company to install your antenna.

**MOUNTING**

The A148-10S mast mount bracket will take up to a 2" (5.1 cm) O.D. mast. A 1-1/4" (3.17 cm) television type tubing is satisfactory for any of the single beams. A good heavy-duty antenna rotator will provide the best service and longest life. Often it is desirable to mount several antennas on one mast. To keep possible interaction to minimum, place your antennas as far apart as you can. For vertical polarization (normally FM and packet), mount the A148-10S with the Reddi-Match rod pointing up. Keep the mast mount bracket on the opposite side of the boom from the elements. This will help to minimize pattern distortion from the mast. For horizontal polarization (normally SSB and CW), mount the A 148-10S with the Reddi-Match below the driven element. See page 5 for suggested dual and quad array configurations.

**SYSTEM GROUNDING**

Direct grounding of the antenna, mast and tower is very important. This serves as protection from lightning strikes, static buildup and high voltage which is present in the radio equipment connected to the antenna. A good electrical connection should be made to one or more ground rods (or other extensive ground system) directly at the base of the tower or mast, using at least #10AWG ground wire and non-corrosive hardware. For details and safety standards, consult the National Electrical Code. You should also use a coaxial lightning arrester. Cushcraft offers several different models, such as LAC-1, LAC-2 and the LAC-4 series.

**ASSEMBLY**

Assemble your antenna by following the directions and illustrations in steps 1 through 5. After the antenna is completely assembled, verify dimensions and element spacings for accuracy. Then, return to the section below for final tuning.

**TUNING PROCEDURE**

The A148-10S does not normally require tuning after assembly. However, if you wish to check the VSWR before installation, please observe the following procedures. To prevent detuning the antenna, it should be tuned in place or at least 7 feet (2.1 m) above ground and clear of surrounding objects. Keep all metal obstructions such as guy wires and other antennas at least 7 feet (2.1 m) away since they will nullify any adjustment and degraded performance will result.

Run the coax cable from your transmitter to the area in which the antenna is going to be tested. The length of this cable or your feedline is not critical. Connect a good quality VSWR bridge to the end of this cable. Connect a short length of cable [10 ft (3 m) or less] from the VSWR bridge to the antenna. Set the transmitter to your center operating frequency. When you read VSWR, be sure you move far enough away from the antenna so that your body does not effect the reading.

Measure the VSWR. If it is high, move the tuning strap by 1/4" (.6 cm) in one direction and check the VSWR. If the VSWR improves, then continue moving the tuning strap in the same direction. If the VSWR deteriorates then move the tuning strap in the opposite direction. Repeat this procedure until no further improvement can be made. You have matched your antenna to 50 Ohms. Tighten all connections making sure to keep the Reddi-Match assembly parallel to the element (EB) above. Tape the feedline to the boom and mast (figure G).

**SPECIFICATIONS**

<b>MODEL</b>	A148-10S	<b>Boom Length, ft (m)</b>	12 (3.6)
<b>Frequency, MHz</b>	144-148	<b>Longest Element, in (cm)</b>	40.3 (102.4)
<b>No. Elements</b>	10	<b>Turning Radius, ft (m)</b>	6 (1.8)
<b>Forward Gain, dBd</b>	13.2	<b>Mast Size Range, in (cm)</b>	1.25-2.0 (3.2-5.1)
<b>Front to Back Ratio, dB</b>	24	<b>Wind Load, ft<sup>2</sup> (m<sup>2</sup>)</b>	1.21 (0.11)
<b>SWR 1.2:1 Typical</b>		<b>Weight, lb (kg)</b>	6 (2.7)
<b>2:1 Bandwidth MHz</b>	≥4	<b>Hardware</b>	Stainless steel
<b>Power Rating, Watts PEP</b>	1000		
<b>3 dB Beamwidth, Degrees</b>			
<b>E Plane</b>	40		
<b>H Plane</b>	46		

# INSTALLATION RECOMMENDATIONS & OPERATING TIPS

(for dual band and VHF beam antennas)

These Installation Recommendations and Operating Tips are offered to help you enjoy the use of your antenna to the fullest. In our estimation, your system will work "optimally", while achieving the longest service life if they are followed.

1. Vertically and horizontally stack your antennas a minimum of 1/2 the boom length of the antenna operating at the higher frequency.
2. Vertically and horizontally space your antenna a minimum of ten (10) feet from any other surrounding metal.
3. When considering height above ground, achieving "line sight" is most desirable for optimal performance. It is recommended that you achieve "line sight" and be at least ten (10) feet above ground
4. Do not use vinyl tape on SO-239 or PL-259 connectors

**NOTE: Please retain the invoice from your dealer for the purchase of your antenna as "Proof of Purchase" as you may be asked for a copy if you make a warranty claim.**





### #5 - FEEDLINE

Tape your feedline along the boom and down mast (figure G). Any length of feed line can be used with your A148-10S. The shortest length cable will have the least loss.


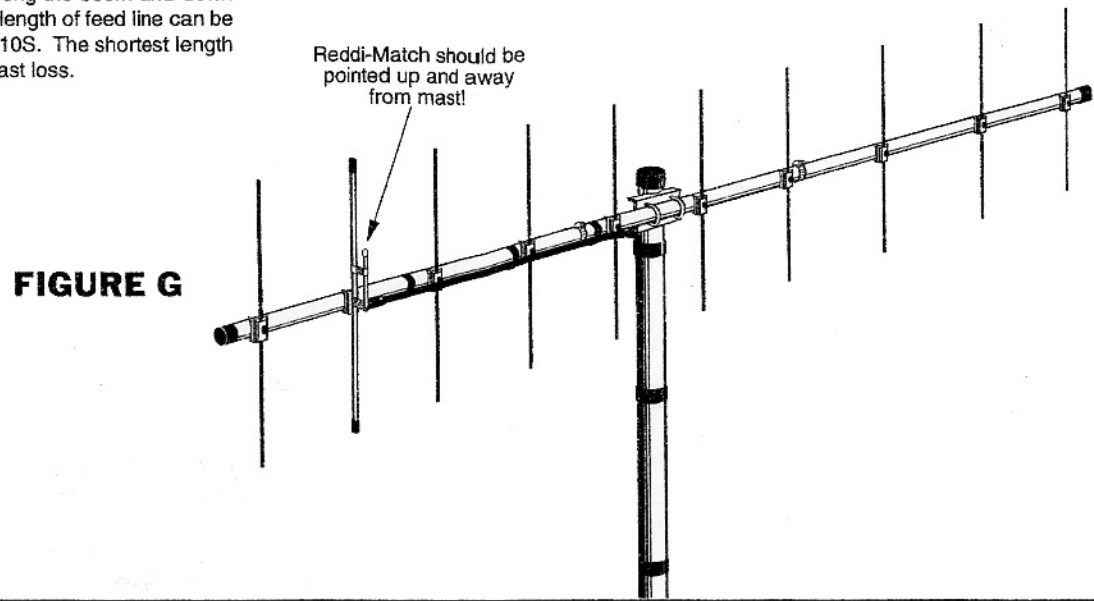


FIGURE G

### #6 - STACKING OPTIONS

The A148-10S may be stacked in arrays for increased gain and improved radiation patterns. When stacking two A148-10S's use the A148-VPKS stacking kit, figure H. When stacking two A148-20S's use two A148-VPKS's and one A148-SK harness, figure I.

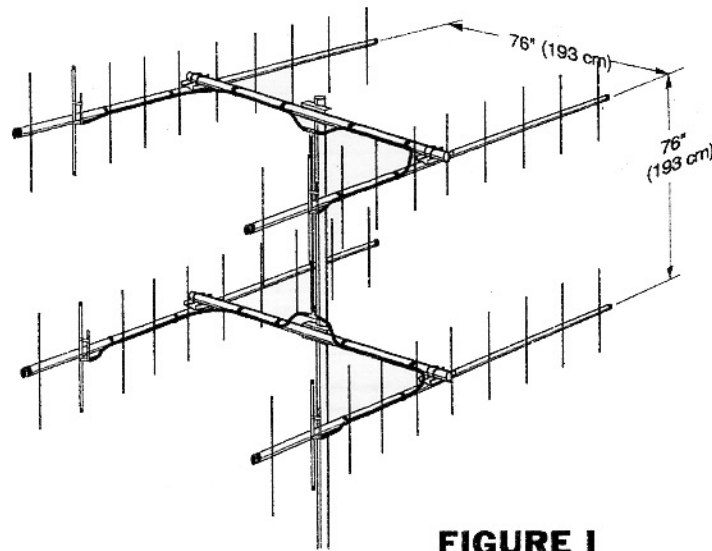

DUAL STACKING KIT  
A148-VPKS  
HARNESS ONLY  
A148-SK

QUAD ARRAY  
(2) A148-20S  
(1) A148-SK HARNESS

FIGURE H


FIGURE I

### MASTER PARTS LIST

KEY	PART #	DESCRIPTION	QUANTITY	KEY	PART #	DESCRIPTION	QUANTITY
11	010011	8-32 stainless steel hex nut	12	404	010404	3-1/4 x 2-7/16 (8.3 x 6.2 cm) stainless steel U-bolt	2
23	190023	Connector bracket	1	410	030410	1" (2.5 cm) stainless steel worm clamp	2
26	190026	7/8" x 1-1/2" (2.2 x 3.8 cm) mounting bracket	10	921	200921	Reddi-Match clamp	2
28	190028	Aluminum half washer	9	941	360941	#8 aluminum flat washer	2
41	011941	#8 stainless steel lock washer	12	BA		1" x 48" (2.5 x 122 cm) aluminum tubing slotted both ends	1
45	321045	Aluminum spacer	4	BB		7/8" x 50" (2.2 x 127 cm) aluminum tubing	1
53	050053	1/2" (1.3 cm) black plastic cap	2	BC		7/8" x 50" (2.2 x 127 cm) aluminum tubing	1
61	050061	7/8" (2.2 cm) black plastic cap	2	EA		40-5/16" (102.4 cm) element rod	1
70	190070	4" x 6" (10.2 x 15.2 cm) formed mast plate	1	EB		38" (96.5 cm) element tube, drilled in center	1
9	010009	8-32 x 5/8" (1.3 cm) stainless steel machine screw	1	EC		37-1/8" (94.3 cm) element rod	1
84	010084	1/4" (.63 cm) stainless steel split lock washer	4	ED		36-1/8" (91.8 cm) element rod	1
85	010085	1/4" (.63 cm) stainless steel hex nut	4	EE		35-1/4" (89.6 cm) element rod	1
104	010104	1/4" (.63 cm) stainless steel flat washer	4	EF		35-3/16" (89.4 cm) element rod	1
115	050115	Connector boot	1	EG		34-3/4" (88.3 cm) element rod	1
116	240116	Silicone package	1	EH		33-3/4" (85.7 cm) element rod	1
118	010118	5/16" (.8 cm) stainless steel hex nut	4	EI		33-7/8" (86 cm) element rod	1
119	010119	5/16" (.8 cm) stainless lock washer	4	EJ		33-3/8" (84.8 cm) element rod	1
120	010120	8-32 x 2" (5.1 cm) stainless steel machine screw	4	PT		3/16" x 4-1/2" (.5 x 11.4 cm) Poly tube	1
231	010231	8-32 x 1-3/4" (4.4 cm) stainless steel machine screw	6	RR		3/16" x 4" (.5 x 10.2 cm) Reddi-Match rod	1
251	050251	3/8" (.9 cm) white plastic cap	1	RT		3/8" x 6-1/2" (.9 x 16.5 cm) aluminum tube	1
326	290326	Danger label	1				
401	010401	3" x 1-3/4" (7.6 x 4.4 cm) stainless steel U-bolt	2				

### #1 - BOOM ASSEMBLY

Assemble the boom as shown below. Make a mark 2" (5.1 cm) in from the ends of the BB and BC tubes as shown. Note that the BB tube has four holes for elements and will become the back of the antenna. The BC tube has three holes and will be the front. Be sure to mark the correct end of each tube by referring to the dimensions of the hole locations. Slide worm clamps (410) onto the slotted ends of tube BA. Insert the BB and BC tubes up to the marks you made. Align the element holes and tighten the worm clamps. Push the end caps (61) onto the ends of the boom.

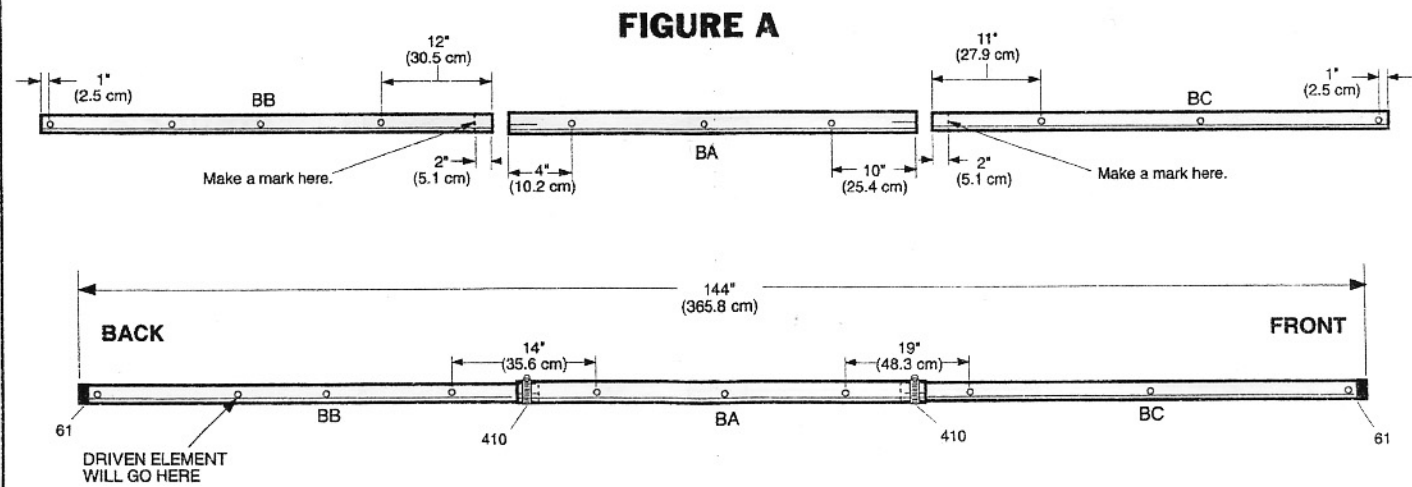

KEY	P/N	DISPLAY	DESC	SIZE	QTY	KEY	P/N	DISPLAY	DESC	SIZE	QTY
BA			ALUM TUBE	1" x 48" (2.5 x 122 cm)	1	61	050061		PLASTIC CAP	7/8" (2.2 cm)	2
BB			ALUM TUBE	7/8" x 50" (2.2 x 127 cm)	1	410	030410		WORM CLAMP	1" (2.5 cm)	2
BC			ALUM TUBE	7/8" x 50" (2.2 x 127 cm)	1						